### **Generator Set Controller**





The APM603 generator set controller provides advanced control, system monitoring, and system diagnostics for a single generator set or paralleling multiple generator sets. The APM603 interfaces the generator set to other power system equipment and network management systems using standard industry network communications. It uses a patented hybrid voltage regulator and unique software logic to manage alternator thermal overload protection as well as serve as an overcurrent protective relay, features normally requiring additional hardware. The APM603 controller meets NFPA 110, Level 1.

#### Display, Interface, and Accessibility

- A 7.5-inch color TFT touchscreen for easy local access to data.
  - Overview can be customized to show critical data at a glance.
  - Create a custom favorites list for quick access to important data
- Measurements are selectable in metric or English units.
- Supports Modbus<sup>®</sup> protocol through serial bus and Ethernet networks, and supports SNMP and BACnet<sup>®</sup> through Ethernet networks.


### **Global Support**

 Sales, installation, and service support from more than 800 Kohler and SDMO service providers around the world.

#### **Onboard Diagnostics**

- Immediate visibility of warnings and faults with text description and code display.
  - 15 seconds of critical data are captured around each warning and fault
  - Critical data can be viewed on the display and downloaded
- Store up to 3000 events locally along with historical data logging of successful starts.
  - Accurate timestamp from real-time clock
  - Event log can be downloaded
- Data logging of customized parameter list for report generation and advanced troubleshooting
  - Store to external USB drive for easy transfer to another device

 $\label{eq:modbus} \begin{tabular}{ll} Modbus@is a registered trademark of Schneider Electric. \\ BACnet@is a registered trademark of ASHRAE. \\ \end{tabular}$ 

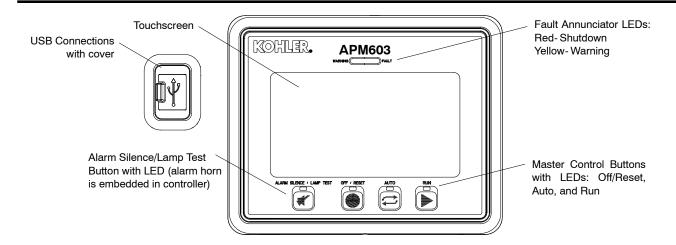

## **Controller Features**

| AC Output Voltage Regulator<br>Adjustment                                     | Maximum of ±10% of the system voltage   |
|---|---|
| Alarm Silence   | For NFPA-110 application or user convenience                                    |
| Alternator Protection   | Generator set overload and short circuit protection                             |
| Automatic Restart   | After a failed start attempt  |
| Cyclic Cranking   | Programmable  |
| ECM Diagnostics   | Displays engine ECM fault codes and descriptions for engine troubleshooting     |
| Engine Start Aid  | Control for an optional engine starting aid                                     |
| Environmentally Sealed<br>Membrane Keypad                                     | Three master control buttons with lights: Off/Reset, Auto, and Run              |
| Integrated Hybrid Voltage<br>Regulator, Patented High-Speed<br>Digital Design | ±0.25% no-load to full-load<br>regulation with three-phase RMS<br>sensing       |
| Lamp Test   | Verifies functionality of the indicator lights                                  |
| Real-time Clock   | Includes battery back-up to retain date and time through controller power cycle |
| Remote Reset  | Allows remote fault resets and restarting of the generator set                  |
| Remote Monitoring Panel   | Compatible with the Kohler®<br>Remote Serial Annunciator                        |
| Run Time Hourmeter  | Displays generator set run time   |
| Run Relay   | Indicates that the generator set is running                                     |
| Time Delay Engine Cooldown (TDEC)   | Time delay before the generator set shuts down                                  |
| Time Delay Engine Start (TDES)  | Time delay before the generator set starts                                      |

# Communication

| USB Port             | (1) Mini-USB port for PC connection<br>(1) USB port for storage device  |
|----------------------|---|
| Serial (RS-485) Port | (1) Non-isolated for RSA III     (1) Isolated for Modbus devices     (1) Isolated for paralleling communication |
| Ethernet Port        | (1) RJ45 for Modbus TCP, SNMP, and BACnet   |

# **Controller Specifications**

| Nominal voltage       | 12 or 24 VDC<br>protected against reverse battery<br>connection |
|-----------------------|---|
| Power                 | 800 mAmps at 12 VDC   |
|                       | 400 mAmps at 24 VDC   |
| Operating Temperature | -40°C to 70°C (-40°F to 158°F)                                  |
| Storage Temperature   | -40°C to 85°C (-40°F to 185°F)                                  |
| Humidity              | 5% to 95% non-condensing  |
| Display Size, W x H   | 154 X 86 mm (6.0 x 3.4 inches)                                  |
| Protection Index      | IP65 Front  |

## **Paralleling Features**

- Isochronous (real and reactive) load sharing with other APM603 controller equipped generator sets
  - Supports paralleling up to 8 generators
- Random first-on logic to prevent two or more generator sets from closing to a dead bus and provides the fastest response for a single generator online
- Automatic synchronizer with dead bus closing
- Soft loading and unloading for generator management and system control by closed-transition ATS with soft load/unload outputs.
- Protective relay functions:
  - O Synch check (25C)
  - Over current (51)
  - Over frequency (810)
  - Over power (320)
  - Over voltage (59)
  - Reverse power (32R)
  - Reverse reactive power (32RQ)
  - Under frequency (81U)
  - Under voltage (27)
- Generator management to allow the start and stop of generators based on load demand or state of other generators
  - Fuel level
  - Run time
  - Manual order
  - Time of day
  - o Efficiency
- Simplified paralleling system view from any generator controller in

### Overcurrent Protective Device

- Provides protection against line-to-line and line-to-neutral faults
- Uses thermal and instantaneous current limit settings for alternator protection
- Includes a maintenance mode for arc flash reduction per NEC 240.87

## Load Management Features

- Programmable outputs included to command the connect and disconnect of loads based on generator or paralleling system state
  - Under frequency
  - Start up
  - Generators online
  - Priority demands
- Supports up to 16 loads per system
  - Can be used on a single generator system
  - Can be combined in a paralleling system for a total system load control capability
- Simplified load management system view from any generator controller in the system
- Load control requires the 4 input/15 output module (see Available Options)

# Advanced Programmable I/O

- Configurable inputs and outputs can be programmed for customer specific use
- PLC-like capability for applying logic to customize generator system

### **Troubleshooting Features**

- 15 seconds of key data automatically captured around each warning and shutdown
  - Data can be exported for detailed analysis
  - Data can be viewed on controller for convenient on-site troubleshooting support
- Configurable data logger will allow you to select parameters to
  - o Data stored to USB device for flexibility on amount of data stored and ability to export for detailed analysis
  - Data capture controlled by user to allow capturing specific data required

### NFPA 110 Requirements

In order to meet NFPA 110, Level 1 requirements, the generator set controller monitors the engine/generator functions/faults shown below.

- **Engine functions:** 
  - Övercrank
  - Low coolant temperature warning
  - High coolant temperature warning
  - High coolant temperature shutdown
  - Low oil pressure shutdown
  - Low oil pressure warning
  - High engine speed
  - Low fuel (level or pressure) \*
  - Low coolant level
  - EPS supplying load
  - High battery voltage
  - Low battery voltage
- General functions:
  - Master switch not in auto  $\circ$
  - Battery charger fault \*
  - Lamp test
  - Contacts for local and remote common alarm
  - Audible alarm silence button
  - Remote emergency stop \*
- Function requires optional input sensors or kits and is engine dependent, see Controller Displays as Provided by the Engine ECM.

#### Standards

The generator set controller has been tested and verified for compliance with the following standards.

- NFPA 99
- NFPA 110, Level 1
- CSA 282-09
- UL 6200
- ASTM B117 (salt spray test)

# **Controller Functions**

The controller displays warning, shutdown, and status messages. All functions are available as relay outputs.

Warning causes the fault light to show yellow and sounds the alarm horn signaling an impending problem.

**Shutdown** causes the fault light to show red, sounds the alarm horn, and stops the generator set.

| Event   | Warning  | Shutdown |
|---|----------|----------|
| Alternator Thermal Protection †               |          | •        |
| Battery Charger Fault *                       | <b>A</b> |          |
| CAN Option Board1 Comm Loss                   | <u> </u> |          |
| Critically Low Fuel Level *                   | <u> </u> |          |
| ECM Diagnostic Event                          | <u> </u> |          |
| ECM Mismatch Shutdown †                       |          | •        |
| Fuel Leak Alarm *                             | <b>A</b> |          |
| Gen Over Power Shutdown †                     |          | •        |
| Gen Over Power Warning                        | <b>A</b> |          |
| High Battery Voltage Warning                  | <u> </u> |          |
| High Coolant Temperature Shutdown †           |          | •        |
| High Coolant Temperature Shutdown ECM DTC †   |          | •        |
| High Coolant Temperature Warning              | <b>A</b> |          |
| High Coolant Temperature Warning ECM DTC      | <b>A</b> |          |
| High Fuel Level Warning *                     | <b>A</b> |          |
| High Oil Temperature Shutdown †               |          | •        |
| High Oil Temperature Warning                  | <b>A</b> |          |
| Local Emergency Stop Shutdown †               |          | •        |
| Loss ECM Comms Shutdown †                     |          | •        |
| Loss Of Signal Low Coolant Level Voltage      | <b>A</b> |          |
| Low Battery Voltage Warning                   |          |          |
| Low Coolant Level Shutdown                    |          | •        |
| Low Coolant Temperature Warning               | <b>A</b> |          |
| Low Fuel Level Shutdown * †                   |          | •        |
| Low Fuel Level Warning * †                    | <b>A</b> |          |
| Low Oil Pressure Shutdown †                   |          | •        |
| Low Oil Pressure Shutdown ECM DTC †           |          | •        |
| Low Oil Pressure Warning                      | <b>A</b> |          |
| Low Oil Pressure Warning ECM DTC              |          |          |
| Low RTC (clock) Battery Voltage               |          |          |
| Maintenance Reminder1                         |          |          |
| Maintenance Reminder2                         |          |          |
| Maintenance Reminder3                         |          |          |
| Not In Auto Alarm                             |          |          |
| Over Crank Shutdown †                         |          | •        |
| Over Current Shutdown (L1, L2, L3) †          |          | •        |
| Over Current Warning (L1, L2, L3)             | A        |          |
| Over Frequency Shutdown †                     |          | •        |
| Over Frequency Warning                        | A        |          |
| Over Power Shutdown †                         | _        |          |
| Over Power Warning                            | A        |          |
| Over Speed Shutdown †                         | _        |          |
| Over Voltage Shutdown (L- L, L- N, each       | 1        |          |
| phase)  |          | •        |
| Over Voltage Warning (L- L, L- N, each phase) | <b>A</b> |          |

| Event   | Warning  | Shutdown |
|---|----------|----------|
| Remote Emergency Stop Shutdown †                |          | •        |
| Reverse Power Shutdown †                        |          | •        |
| Reverse VAR Shutdown †                          |          | •        |
| Under Frequency Shutdown †                      |          | •        |
| Under Frequency Warning                         | <b>A</b> |          |
| Under Voltage Shutdown (L-L, L-N, each phase) † |          | •        |
| Under Voltage Warning (L- L, L- N, each phase)  | <b>A</b> |          |
| Weak Cranking Battery                           | <b>A</b> |          |

| Would Statisting Battery   |   |
|--|---|
| Status Messages  |   |
| Auto Button Pressed  |   |
| EPS Supplying Load   |   |
| Generator Running  |   |
| Generator Started  |   |
| Generator Stopped  |   |
| GFCI Warning *   |   |
| Load Shed Overload   |   |
| Load Shed Under Frequency  |   |
| Off Button Pressed   |   |
| RSA Event Programmable Digital Inputs, 1-8   |   |
| Run Button Pressed   |   |
| * Function requires optional input sensors or kits † Items included with common fault shutdown | · |

# **Inputs and Outputs**

| Standard Dedicated User Inputs | Input Type                |
|--------------------------------|---------------------------|
| Remote Engine Start            | Two-wire input            |
| Auxiliary Fault (Shutdown)     |                           |
| Auxiliary Warning              |                           |
| Battery Charger Fault          | Digital Inquit            |
| Fuel Leak Alarm                | - Digital Input           |
| Low Fuel Level Switch          |                           |
| Remote Emergency Stop          |                           |
| Speed Bias                     | Analog Voltage Input,     |
| Voltage Bias                   | Scalable up to +/- 10 VDC |

| Standard Dedicated User Outputs | Output Type         |
|---------------------------------|---------------------|
| Run/Fuel                        |                     |
| Common Failure                  | Bula Bi a Chal      |
| Common Warning                  |                     |
| High Coolant Temperature        | Relay Driver Output |
| Close Breaker                   |                     |
| Trip Breaker / Shunt Trip       |                     |

| Optional Configurable User Inputs and Outputs |   |  |  |
|---|---|--|--|
| User C  | Configurable Inputs                     | 2 Analog, 0-5 VDC<br>4 Dry Contact Digital |  |
| User C  | onfigurable Relay Outputs               | 14 NO/NC Relays<br>1 Common Fault Relay    |  |
| Note:   | Programmable I/O is configuratechnician | able by a Kohler-authorized                |  |

# **Engine Data**

The following data is communicated to the controller by the engine ECM.

| John Deere<br>Engines |
|-----------------------|
| D                     |
| D                     |
| C/S/D                 |
| S                     |
| S                     |
| C/S/D                 |
| C/S†                  |
| S                     |
| S/D                   |
| S†                    |
| C/S/D                 |
|                       |
|                       |

- † Controller uses local analog input to obtain this information.

NOTE: See the generator set specification sheet for engine model identification.



KOHLER CO., Kohler, Wisconsin 53044 USA Phone 920-457-4441, Fax 920-459-1646 For the nearest sales and service outlet in the US and Canada, phone 1-800-544-2444 KOHLERPower.com

## **APM603 Available Options**

| Common Failure Relay provides a relay output to signal a generator set fault.   |
|---|
| Float/Equalize Battery Charger available with 6 or 10 amp output for 12 or 24V DC voltage output. The 10 amp model provides NFPA 110 charging and alarming capability.  |
| Electrically Operated Circuit Breakers  |
| For paralleling systems   |
| Available generator-mounted or remote-mounted   |
| • 24VDC   |
| <b>Ground Fault Relay</b> provides a relay output to signal a ground fault is detected.   |
| Input/Output Module provides:   |
| • 2 analog inputs (0-5 VDC)   |
| 4 digital input connections with connection to ground   |
| <ul> <li>14 relay output connections (Form C, rated 10A, 120V)</li> </ul>   |
| <ul> <li>1 common fault relay output (NO, rated 2A, 24VDC)</li> </ul>   |
| <b>Key Switch</b> to allow selection of RUN, OFF and AUTO modes. Lockable in the AUTO position by removing the key.   |
| Remote Emergency Stop Switch available as a wall mounted panel to remotely shut down the generator set.   |
| Remote Monitoring Panel. The Kohler® Remote Serial Annunciator (RSA) enables the operator to monitor the status of the generator set from a remote location, which may be required for NFPA 99 and NFPA 110 installations, and up to four Automatic transfer switches |
| Shunt Trip Wiring provides relay outputs to trip a shunt trip circuit breaker and to signal the common fault shutdowns. Contacts rated at 10 amps at 28 VDC or 120 VAC  |

| DISTRIBUTED BY: |
|-----------------|
|                 |
|                 |
|                 |
|                 |
|                 |
|                 |

Availability is subject to change without notice. Kohler Co. reserves the right to change the design or specifications without notice and without any obligation or liability whatsoever. Contact your local Kohler® generator set distributor for availability.